Notes:

© Copyright IBM Corp. 1983
April 1983

Option Instructions

IBM Communications Adapter Cable

For

IBM
Personal Computer XT

Or

IBM
Personal Computer Expansion Unit

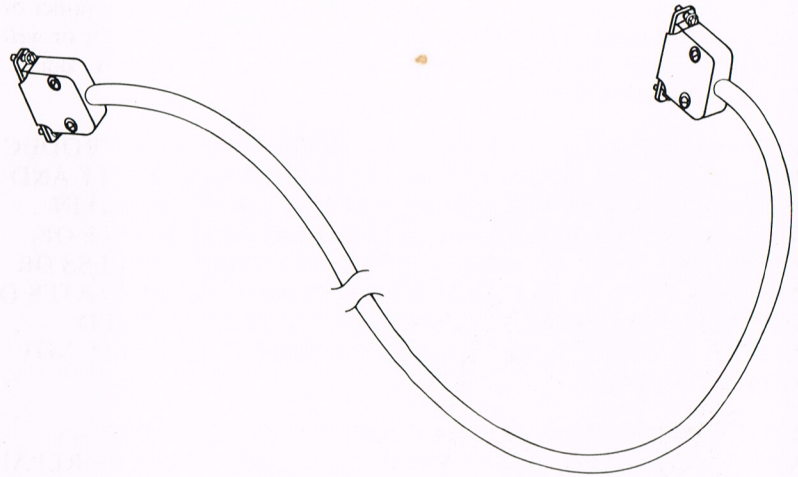

This carton contains the following:

- IBM Communications Adapter Cable
- Wrap Plug

If any items are missing or damaged, notify your place of purchase.

1504842

LIMITED WARRANTY

The International Business Machines Corporation warrants this IBM Personal Computer Product to be in good working order for a period of 90 days from the date of purchase from IBM or an authorized IBM Personal Computer dealer. Should this Product fail to be in good working order at any time during this 90-day warranty period, IBM will, at its option, repair or replace this Product at no additional charge except as set forth below. Repair parts and replacement Products will be furnished on an exchange basis and will be either reconditioned or new. All replaced parts and Products become the property of IBM. This limited warranty does not include service to repair damage to the Product resulting from accident, disaster, misuse, abuse, or non-IBM modification of the Product.

Limited Warranty service may be obtained by delivering the Product during the 90-day warranty period to an authorized IBM Personal Computer dealer or IBM Service Center and providing proof of purchase date. If this Product is delivered by mail, you agree to insure the Product or assume the risk of loss or damage in transit, to prepay shipping charges to the warranty service location and to use the original shipping container or equivalent. Contact an authorized IBM Personal Computer dealer or write to IBM Personal Computer, Sales and Service, P.O. Box 1328-W, Boca Raton, Florida 33432, for further information.

ALL EXPRESS OR IMPLIED WARRANTIES FOR THIS PRODUCT INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO A PERIOD OF 90 DAYS FROM THE DATE OF PURCHASE, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER AS WARRANTED ABOVE, YOUR SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. IN NO EVENT WILL IBM BE LIABLE TO YOU FOR ANY DAMAGES, INCLUDING ANY LOST PROFITS, LOST SAVINGS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE SUCH PRODUCT, EVEN IF IBM OR AN AUTHORIZED IBM PERSONAL COMPUTER DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

IBM Communications Adapter Cable

Communications Adapter Connector Pin #	Name	Modem Connector Pin #
NC	Outer Cable Shield	1
2	Transmitted Data	2
3	Received Data	3
4	Request to Send	4
5	Clear to Send	5
6	Data Set Ready	6
7	Signal Ground (Inner Lead Shields)	7
8	Received Line Signal Detector	8
NC		NC
NC		NC
11	Select Standby	11
NC		NC
NC		NC
NC		NC
15	Transmitter Signal Element Timing	15
NC		NC
17	Receiver Signal Element Timing	17
18	Test	18
NC		NC
20	Data Terminal Ready	20
NC		NC
22	Ring Indicator	22
23	Data Signal Rate Selector	23
NC		NC
25	Test Indicate	25

© Copyright IBM Corp. 1983

Connector Information

The IBM Communications Adapter Cable connects to the following pins on the 25-pin connectors.

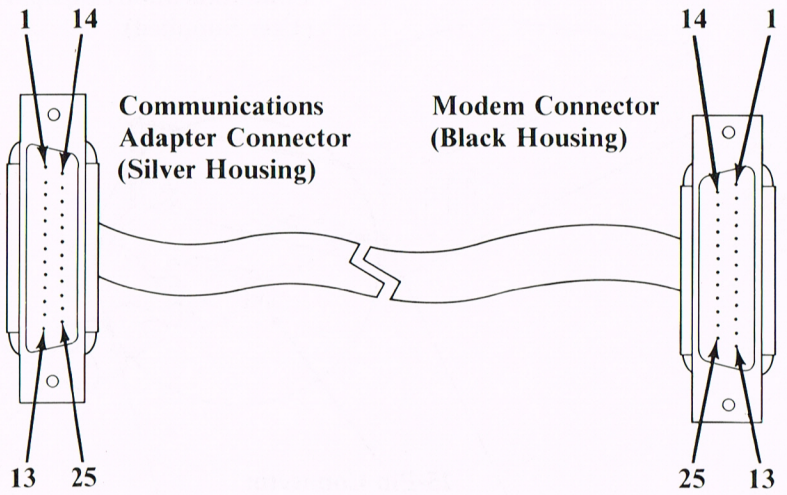

© Copyright IBM Corp. 1983

Contents

Installation Requirements 3
Tool Required 3

Installation Instructions 5

Connector Information 8

© Copyright IBM Corp. 1983

Notes:

© Copyright IBM Corp. 1983

8. Connect the other end of the communications adapter as shown in the example, and tighten the screws by turning them clockwise.

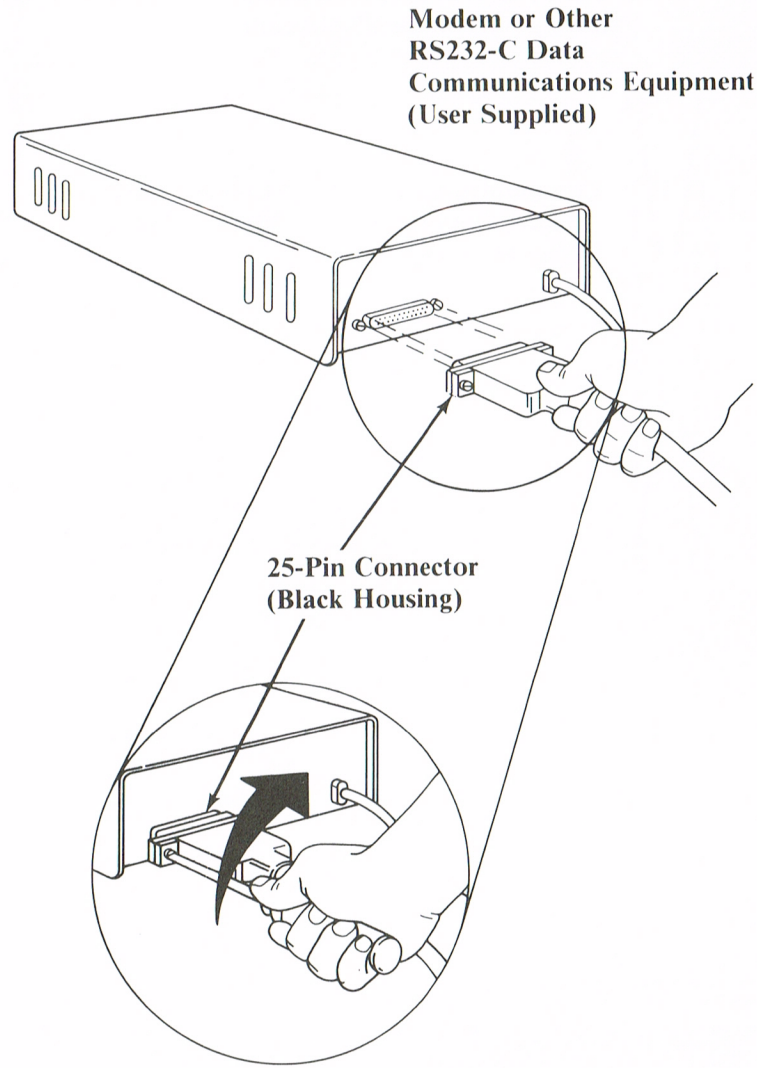

Your IBM Communications Adapter Cable is now installed and ready to use. Refer to your Guide to Operations manual.

© Copyright IBM Corp. 1983

5. Move your keyboard and all external options away from the work area.

6. Position the unit to allow access to the rear.

7. Connect the cable (silver colored end) to the communications adapter connector at the rear of the unit, as shown, and tighten the screws by turning them clockwise.

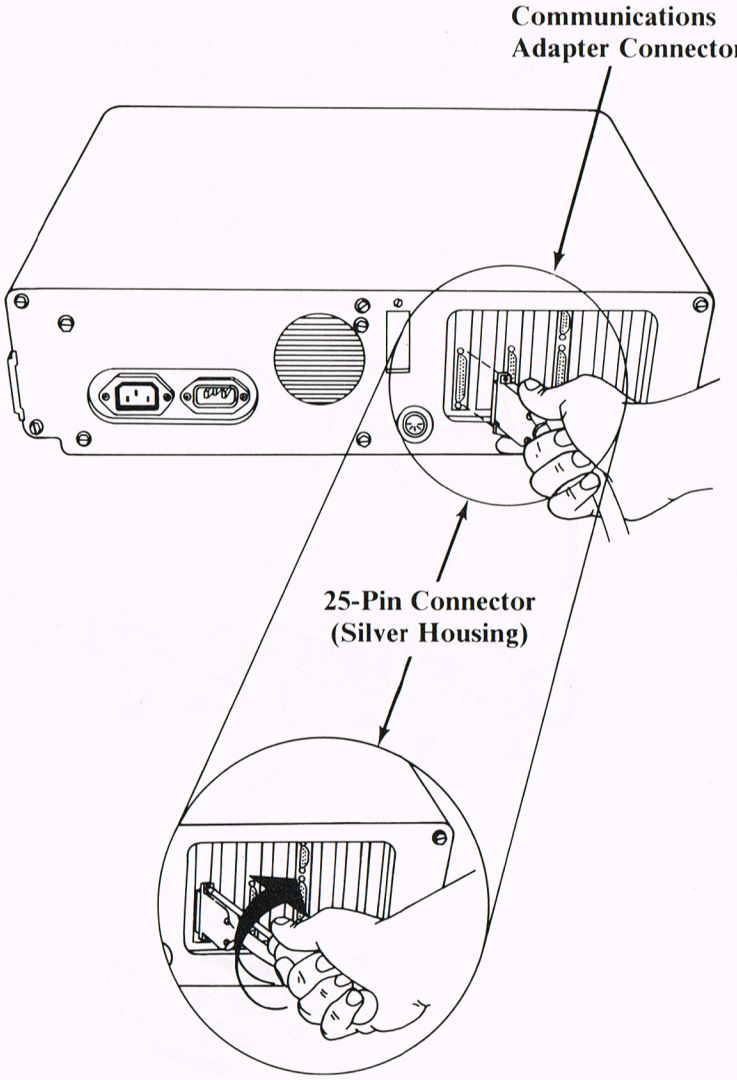

© Copyright IBM Corp. 1983

Installation Requirements

- The communications adapter to which you are connecting this option should already be installed in your system. If not, refer to the option instructions that came with the communications adapter, and install it before continuing.

- Insert the Option Instructions in your Guide to Operations under the correct bleeder tab.

Tool Required

- Small, flat-blade screwdriver

The non-IBM devices in this manual are for illustration only, and their use here does not constitute a recommendation or an endorsement by IBM. Selection, interconnection, and use of another manufacturer's device are the sole responsibility of the customer.

© Copyright IBM Corp. 1983

Notes:

© Copyright IBM Corp. 1983

Installation Instructions

1. Set the Power switch on the system unit (and expansion unit, if attached) to Off.
2. Set all external power switches Off (printer, TV, etc.).
3. Unplug the system unit's (and expansion unit's) power cord from the wall outlet.
4. Disconnect all cables from the rear of the unit in which the option is to be installed.

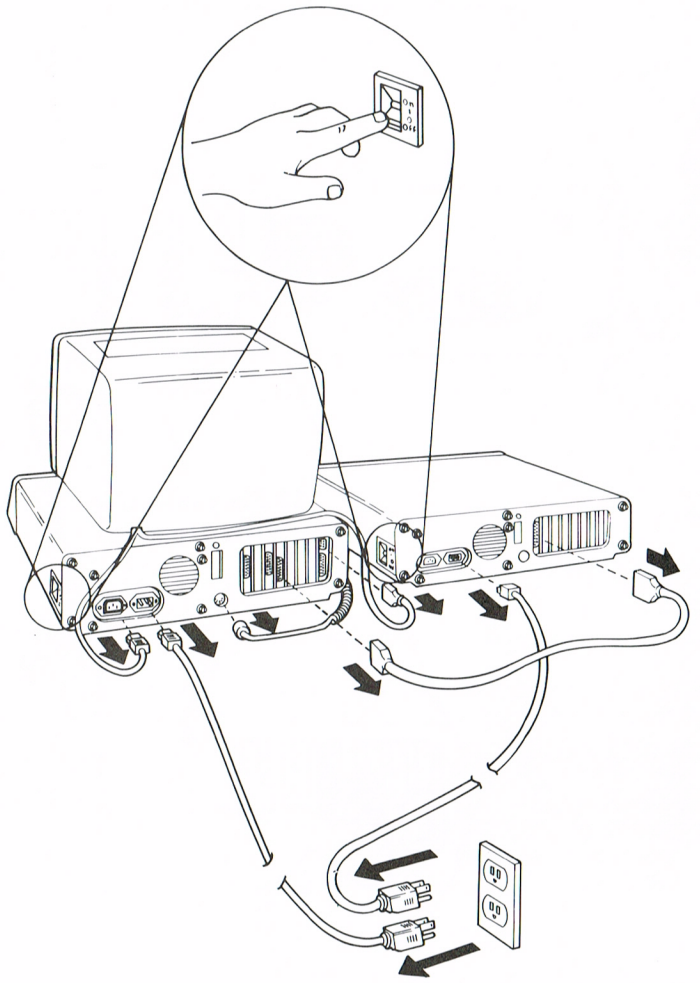

© Copyright IBM Corp. 1983